
SV

Kontroll av AWECO trevägsventil

Vid eventuella funktionsstörningar på trevägsventilen påverkas endast kyldelen. Frysdelens funktion förblir opåverkad och arbetar normalt.

1. Spolen skall ha en resistans på 2,8 kOhm. Om spolen är felaktig kan den bytas genom att lossa de två skruvarna och öppna fronten på ventilhuset. Se till att de två små permanentmagneterna ligger på plats innan fronten stängs igen.
2. Om spolen är hel kan funktionen av ventilen kontrolleras enligt följande:
 - Gör produkten strömlös genom att dra ur anslutningsladden.
 - Demontera kontrollpanelen och koppla loss kontakten till temperatursensorerna.
 - Sätt i anslutningsladden igen. Inom tio sekunder skall ett eller två klick höras från ventilen.


EN

Checking the AWECO three-way valve

Malfunction of the three-way valve will only affect the refrigerator section. The freezer section will be unaffected and continue to work normally.

1. The coil should have a resistance of 2,8 kOhm. If the coil is defective it can be changed by undoing the two screws and open the front of the valve body. Make sure that the two small permanent magnets are in position before closing the front again.
2. If the coil is in order the valve can be checked as follows:
 - Make sure that the product is without current by unplugging the connection cord.
 - Dismount the control panel and disconnect the contact for the sensors.
 - Plug in the connection cord again. Within ten seconds one or two clicks should be heard from the valve.

Ventilen i genomskärning
Valve cut away

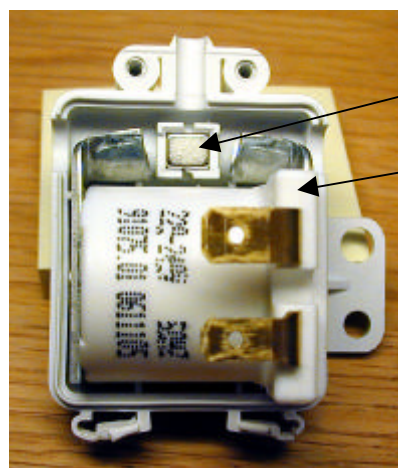

Magnet

Spole / Coil